 


# EV-04

 
## Personal mobile alarm system

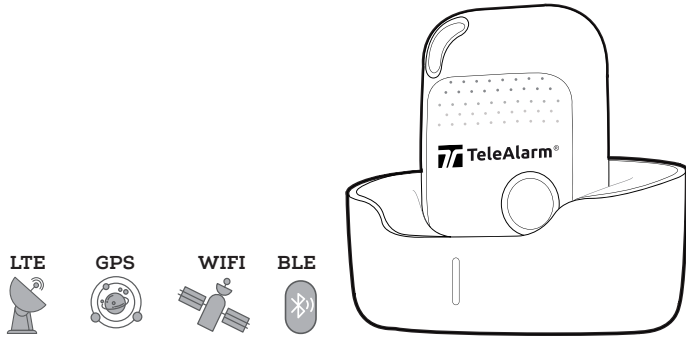

### Insert the SIM card

The SIM card is not included in the package.

A Nano SIM card is available from the user's local operator.

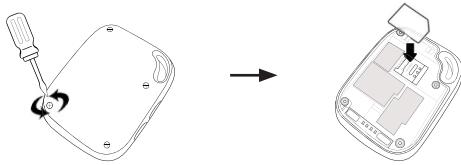

- Unscrew the back cover and remove.
- Insert the SIM card and make sure it's activated and in credits.
- Replace the cover and tighten the screws.

**TIP** Before installing the SIM card, check if the SIM card has a PIN code or not, if yes, please use a mobile phone to remove the card's PIN code.

### Charging base



 
- Place the device on the charging base.
- Connect the USB cable from the charging base to the AC adaptor.

The charging base light will glow when charging and turn solid when fully charged.


**TIP** When using the device for the first time, please fully charge the battery for around 2~3 hours.

**TIP** When the battery level falls below 20% it will send a low battery warning message to recipients on the contact list via text message or phone call.


### Getting to know your device

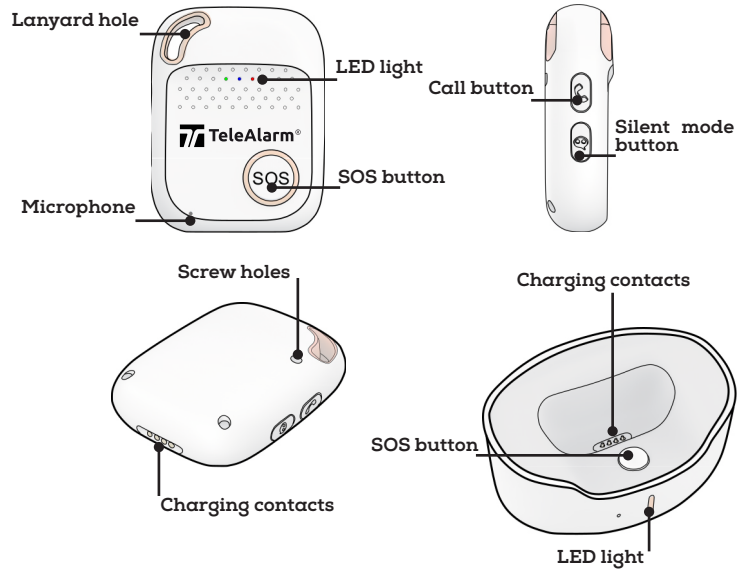

### Switching device on and off

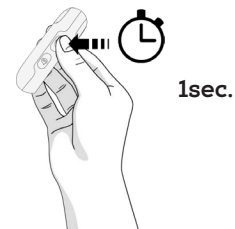 

 - **To turn the device on:** press the CALL button for 1 second, all the LEDs will flash rapidly. The device can also be turned on automatically by placing it in the docking station.

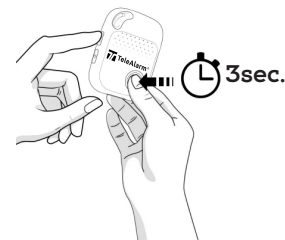

- **To turn the device off:** press and hold the side button and SOS button together for 3 seconds until the LEDs turn off.


### Silent mode

 - Double-click the silent mode button to turn off voice warnings; double-click once more to turn voice warnings on.

### Getting a GPS fix

- To get an initial location for the GPS features, go outdoors or stand near a window so the device can get a fix on the satellites. This could take few minutes, depending on your environment.

## Activating an SOS alarm

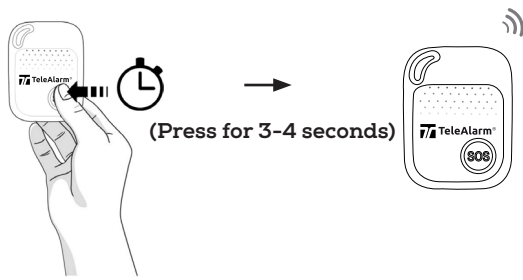

When you need help, press the SOS button for 3-4 seconds until you hear a voice prompt, indicating an SOS alarm. This starts the sequence of sending a "help me!" text message to your emergency contact numbers followed by the outgoing calls.


- If the device fails to connect to the first number, it will call the second number after delay of 10 seconds. In case the second number fails to be connected as well, the system will connect to the third number, etc.
- Between each call, there will be a 10-second delay, during which time, the user can stop the call sequence or prevent a possible false alarm by pressing the SOS button.
- Use the side buttons +/- to adjust the sound volume during a call.

Please remember to program emergency contact numbers. It is not mandatory for all ten authorized numbers to be set, however a minimum of one must always be set.

Please be patient during the call sequence. There can be short delays as the alarm calls phones which may be out of range or delivered to the recipients' voicemail.

### TIP
 
## Making a phone call

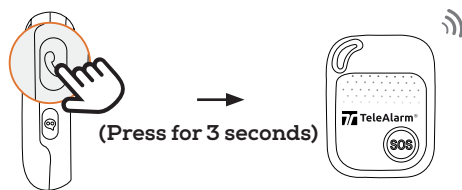

- To make a call, press the CALL button for 3 seconds; you will hear a beep, and then it will dial the defined number.



- To end the call, press the SOS button.

## What do the lights mean?

### Cellular signal indicator - Green

Indication	Light shows a single flash rapidly every 3 seconds	Light shows a double flash rapidly every 3 seconds
Meaning	The device has a stable cellular signal	The device is registered to the cellular network

### Positioning indicator - Blue

Indication	Light shows a single flash rapidly every 3 seconds	Light shows a double flash rapidly every 3 seconds	Light off
Meaning	The device has no latest location fix	The device has latest location fix	The device is not fixing the latest location

### Power indicator - Red

Indication	Light on (solid)	Light shows a double flash rapidly every 3 seconds
Meaning	Device has been fully charged	BLE connected

Indication	Light blinking quickly	Light off or blinking slowly
Meaning	Battery power is lower than 20%	The device is charging

## Caution

Please comply with the instructions to extend the unit life:

- Don't use or store the unit in dusty places.
- Avoid storing or using the unit in places likely to be exposed to extremes of temperature.
- Clean the unit with a dry cloth. Don't clean the unit using chemicals or detergents.
- Don't disassemble or refit the unit.
- Using the wrong batteries can result in damage to the device.

**Warning: Keep the device at least 25cm away from a pacemaker.**

**Warning: Keep the IMEI and SIM confidential to maintain privacy and security.**