

Netrix-Lifecheck integration



Copyright

This document may not be copied in whole or in part or otherwise reproduced without prior written consent from IndigoCare Europe or IndigoCare USA, except where specifically permitted under international copyright law.

Disclaimer

The information in this document is subject to change without notice. IndigoCare Europe or IndigoCare USA assumes no responsibility for inaccuracies or omissions and specifically disclaims any liabilities, losses, or risks, personal or otherwise, incurred as a consequence, directly or indirectly, of the use or application of any of the contents of this document. For the latest documentation, contact IndigoCare Europe or Indigocare USA.

This publication may contain examples of screen captures and reports or database used in daily operations. Examples may include fictitious names of individuals and companies. Any similarity to names and addresses of actual businesses or persons is entirely coincidental.

All examples of patient information in this document are fictitious. Any resemblance to a real patient or facility is purely coincidental. The owners and users of this product are solely responsible for complying with all applicable patient information laws. The users, by their use of this product, agree to indemnify the manufacturer and/or seller of this product against all claims, litigation, and suits filed for patient information violations.

Intended use

Use this product only for the purpose it was designed for; refer to the data sheet and user documentation for details. For the latest product information, contact Indigocare Europe or IndigoCare USA.

This hardware installation guide is a working and supporting tool for certified engineers for installing and maintaining iCall installations.

FCC compliance

This equipment has been tested and found to comply with the limits for a Class B, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Contact information

IndigoCare USA 1001 South Dairy Ashford, Suite 100 Houston, TX 77077 USA

T: +1 713.595.6698 F: +1 713.595.6699

Email: <u>usa@indigocare.com</u> www.indigocare.com IndigoCare Europe Schoebroekstraat 48 3583 Paal Belgium

T: +32 11 247090 F: +32 11 247099

Email: Europe@indigocare.com

www.indigocare.com

Content


| 1. | General purpose | 5 |
|----|---------------------|----|
| 2. | Implementation | 5 |
| 3. | Programmation | 8 |
| 4. | Website integration | 10 |

1. General purpose

This document describes the implementation, programming and testing of the Welfare interface in the Netrix software. The goal is to monitor a selection of rooms, and warn the appropriate person if there hasn't been an action in a room for 24 hours.

2. Implementation

To enable the Welfare interface, go to Input-Output screen via the menu "Setup-Input-Output" and activate the interface (license).

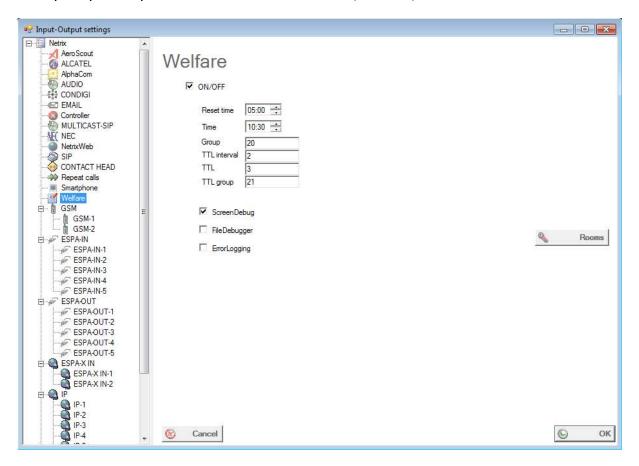

Reset Time: The time when all previous responses are removed from the systems. All rooms go back to an idle state, pending for a response.

Time: The time when the group should be called, if any rooms are still in idle state.

Group: The group number to be called when there hasn't been activity in a room between "Reset Time" and "Time". If less than 5 rooms were inactive, this group will be called for each room. When 5 or more rooms were inactive, this group will only be called once. Inactive rooms will be written in MSG1.

TTL: amount of repetitions (Time To Live)

TTL interval: interval between repetitions


TTL group: The group number that is called after the repetitions. Only called in case of remaining rooms.

ScreenDebug: check this box if you need a debug screen for this interface FileDebug: check this box to log the debug info

Errorlogging: Check this box to send errors to the errorlog.


Rooms

Click on the Rooms button to edit the appropriate rooms.

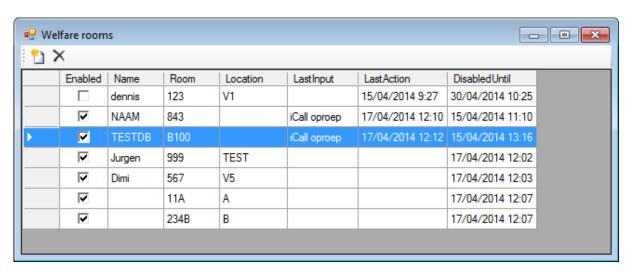

All rooms can be disabled for a certain period. Hereafter the rooms will automatically enabled again.

The current state is displayed in a window in the main screen.

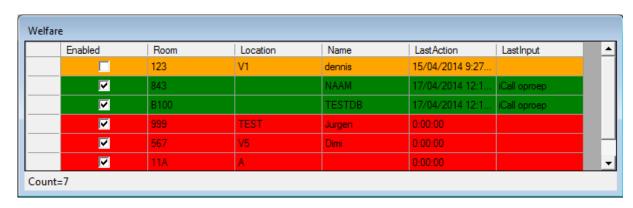

Red: Room did not respond before the time ran out.


Orange: Room is in idle state, and waiting for a response.

Green: Room has respond.

3. Programmation

Create or select a group where you need to include a welfare message.

Select type "Welfare".

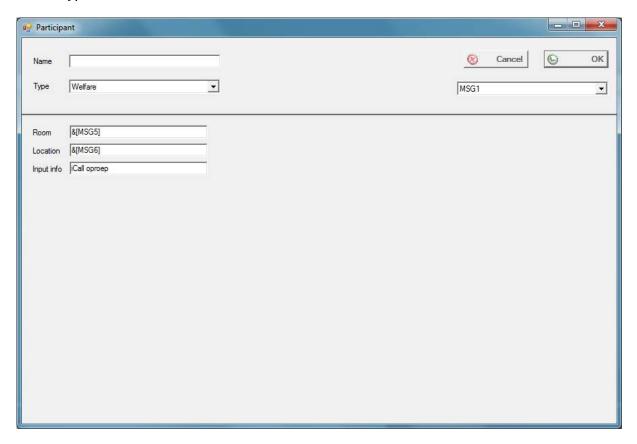


Room: the Room number

Location: The location of your room (can be left empty).

Room and location should match a room programmed in the Welfare setup (Input-Output)

Input info: additional info, for example to specify the source of the call.

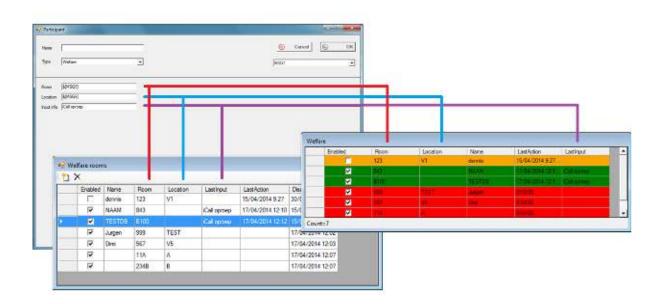

4. Website integration

To manage the rooms, also a website is available.

Browse to the Netrix website http://xxx.xxx.xxx/Netrix where xxx.xxx.xxx stands for the IP address of the Netrix. Log in with the appropriate credentials. If you have a valid license, an additional link "Welfare" will appear in the menu.



You can now manage the rooms.



For staff members without login credentials, a second website is available to get an overview of the current room statuses. To view the non-password protected website, browse to http://xxx.xxx.xxx.xxx/lifecheck where xxx.xxx.xxx stands for the IP address of the Netrix.

