




# **Standard Switching**

# iCall 480 ST-KL






## **Standard Room Lamp**



- Connectable to iCall address unit 5\*\*, 220 OiD and 220 SIP-Touch (iCall patient station) via standard wiring.
- For use in renovations and / or new construction via existing cabling.
- According to the German VDE 834-1 and VDE 834-2 standard.
- Flush or surface mount possible
- Power range 16 VDC to 30 VDC



- Assistance (flashing red + green)
- Bathroom assistance (flashing yellow + green)
- Bathroom call (yellow)
- Presence (green)
- Emergency (rapidly flashing red)

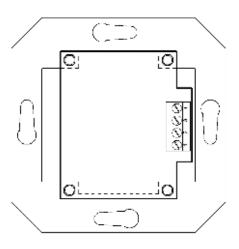

### **Connections**

- 1. +24v
- 2. Green LED
- 3. Yellow LED
- 4. Red LED

#### Properties:

- Connect pin 4 to low (GND) => Red LED will be activated
- Connect pin 3 to low (GND) => Yellow LED will be activated
- Connect pin 2 to low (GND) => Green LED will be activated

Order information

Part N°

NWBAES4800

ndigo (care

Datasheet version: 2015V0202